


User Guide for the **KODAK X-OMAT Multiloader 7000** **Darkroom Film Feeder**

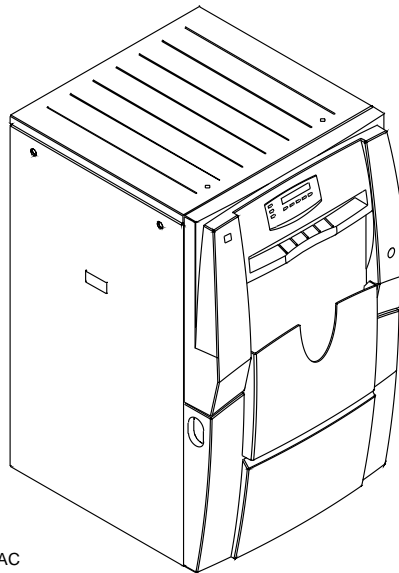

H186_1000AC



PLEASE NOTE The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.



Caution
Federal law restricts this device to sale to, by, or on order of a physician. The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication. No patent license is granted by this information. Eastman Kodak Company reserves the right to change this information without notice and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from the use of this information, even if loss or damage is caused by Kodak's negligence or other fault

Table of Contents

Description	Page
Introduction	1-1
General Function	2-1
Film Input	2-1
Continuous Film Input	2-2
Status Indicator	2-2
Warranty and Service	3-1
Warranty	3-1

1 Introduction


The KODAK X-OMAT Multiloader 7000 Darkroom Film Feeder (DFF) is an optional accessory for the KODAK X-OMAT Multiloader 7000 (Multiloader). The DFF is installed through a cutout in the wall, and is placed in a darkroom while the Multiloader is in normal room light. This enables the customer to process non-standard or infrequently used film sizes through the Processor in the Multiloader 7000.

The DFF is powered by the Multiloader with Safety Extra Low Voltage (SELV).

Exposed film is placed in the DFF and is then automatically fed into the KODAK X-OMAT 3000 RA Integrated Processor (Processor). The Processor is capable of operating at 3 different user-selectable speeds for either K/RA, Rapid, or Standard cycle processing of film.

In the K/RA cycle, the Multiloader is compatible with the KODAK RA films and KODAK RA/30 chemistry.

The Display Panel on the front of the Multiloader allows you to operate the Multiloader and the Processor as well as indicating the status of the DFF when in use. Cassette insertion and exit, access to the Film Supply Magazine and film exit are performed at the Operator Interface located at the front of the Multiloader.

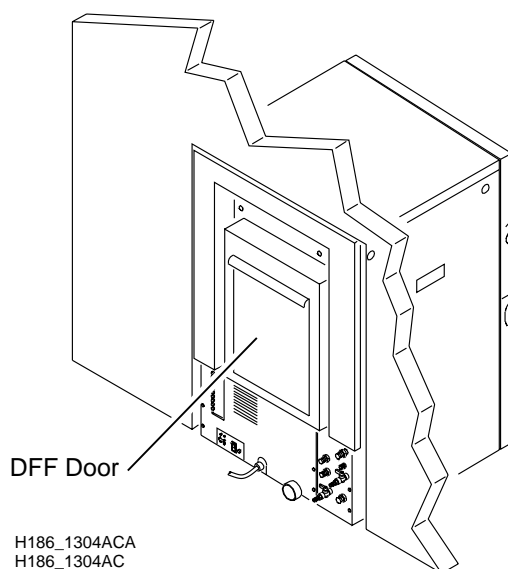

Warning

The KODAK X-OMAT Multiloader 7000 and the KODAK X-OMAT Multiloader 7000 Darkroom Film Feeder must be installed by a qualified KODAK Service Representative.

The DFF does not include any parts to be repaired by the operator. The operator may only open the DFF Door. Do not perform repairs yourself. Call for a KODAK Service Representative.

2 General Function

Film Input



Important

For film input operation with the DFF, there must be no light in the darkroom except the safelight recommended for the x-ray film being used.


1. Check that the Status Indicator is green.
2. Pull the Handle toward you to open the DFF Door.
3. Place the film on the inclined Film Guide. The maximum film width is 40 cm (15.7 in.).



Note

Feed 35 x 43 mm size film with the 35 mm edge first.

4. To feed two 18 cm wide films simultaneously, place the films side by side at the left and right side of the Film Guide.

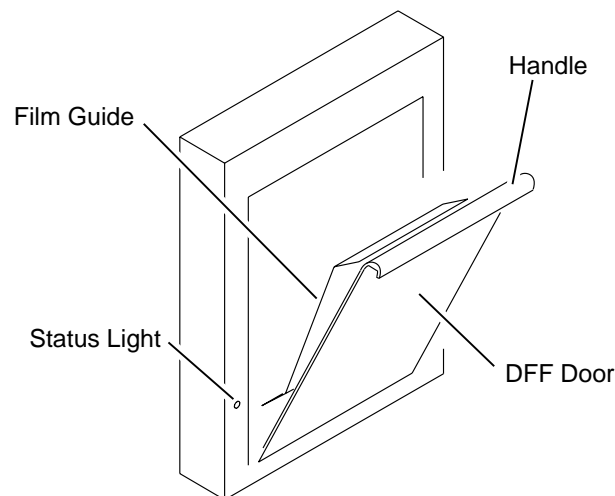

H186_1100ACC
H186_1100AC



Note

- Long films must be fed in along the left or right side of the Film Guide.
 - Tri-fold film must be hand fed with the Door open and should be picked up at the Processor Exit Bin by hand to prevent the film from falling on the floor.
 - 10 x 10 cm films have to be fed in diagonally in order to transport them correctly through the Processor.
5. Close the DFF Door.

As soon as the Door is closed the Status Indicator changes from green to red and the Door is locked. When the film has passed the Processor Entrance Rollers, the Status Indicator turns green again. The DFF is now ready for the next film input.

Continuous Film Input

Continuous Film Feed allows feeding of more than one film without closing the DFF Door.

1. Feed the first film and leave the Door open.
2. As soon as the beep is heard the next film can be fed.
3. After the last film is fed, close the Door. The Multiloader is now ready for operation again.


Status Indicator



Important


- The DFF does not monitor the Processor temperature. After the system is turned on, the Status Indicator becomes green even if the Processor has not reached the correct temperature. Use the Display Panel on the front of the Multiloader to check the temperature of the Processor.
- In case of an emergency, a film can be fed even if the Processor is not at the correct temperature, but the quality of the processed film may not be sufficient.
- You can operate the DFF as long as the Status Indicator is green, even if there is an error code, other than "Processor Fatal Errors" on the Display Panel of the Multiloader. The film path of the Processor and the DFF is not affected if there is an error present in the Cassette Unit or the Magazine Unit.

The DFF has a Status Indicator located on the side of the DFF. The Status Indicator has a double LED, Green/Red.

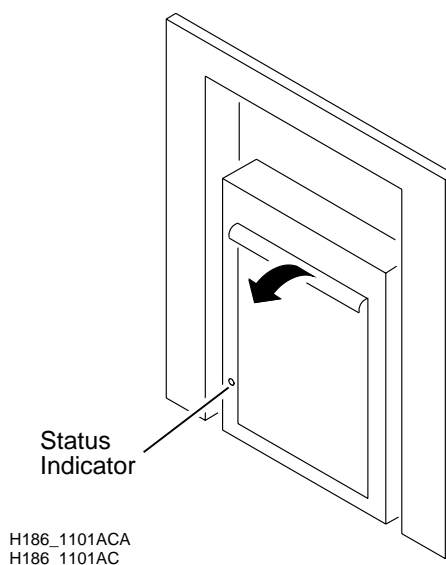

Status Indicator	Description
Green	The Multiloader is in standby mode. This allows the DFF Door to be opened and the film fed.
Red	<p>The DFF Door is locked due to the following:</p> <ul style="list-style-type: none"> the Multiloader is in use the Processor is not ready for the next film input there is a malfunction in the Processor the Door has been opened and closed without any film input, and the unit assumes a film is being fed to the Processor. The Status Indicator will illuminate green again as soon as the unit recognizes that there is not film in the system, approximately 30 seconds the wait time for the film to enter the Processor is not complete
No Status Indicator	The Multiloader is turned off and the DFF Door is locked.

When the DFF Door is open the Display Panel on the Multiloader displays the following screen:

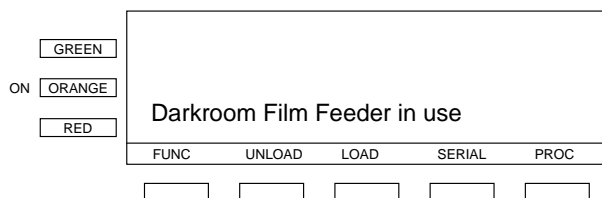

H186_1102AC

The Multiloader will not accept a Cassette and the Status Indicator is orange.

3 Warranty and Service

Warranty

Kodak warrants this KODAK X-OMAT Multiloader 7000 Darkroom Film Feeder to function correctly for one year from the date of initial installation, when installed within one year from date of shipment.

Warranty Repair Coverage

If this equipment does not function correctly during the warranty period, the KODAK Service Representative will provide or arrange for repair of the equipment during the dealer's normal working hours. Such repair service will include any adjustments and/or replacement of parts required to maintain your equipment in good working order.

The Multiloader requires a constant active exhaust 24 hours a day 7 days a week. Failure to follow this requirement will cause destruction of the machine which will not be covered by any warranty.

How to Obtain Service

Should the equipment require service, refer to the sales contract for details on whom to call for service, or contact the KODAK Service Representative.

Limitations

Warranty service is limited to the contiguous United States, the island of Oahu in Hawaii, and certain areas of Alaska.

This warranty does not cover:

- circumstances beyond the control of Kodak
- misuse
- abuse
- attachments
- accessories
- alterations not marketed by Kodak (including service or parts to correct problems resulting from the use of such attachments, accessories, or alterations)
- failure to follow the operating instructions recommended by Kodak
- supply items



Important

Kodak makes no other warranties, express or implied, for this equipment.

- Repair without charge is the only obligation of both Kodak and the dealer under this warranty. Kodak will not be responsible for any consequential or incidental damages resulting from the sale, use, or improper functioning of this equipment, even if loss or damage is caused by the negligence or other fault of Kodak.
- Such damages for which Kodak will not be responsible, include, but are not limited to, loss of revenue or profit, downtime costs, loss of use of the equipment, cost of any substitute equipment, facilities or services or claims of your customers for such damages.
- This limitation of liability will not apply to claims for injury to persons or damage to property caused by the sole negligence or fault of Kodak or by persons under its direction or control.

Publication History

Print Date	Pub. No.	ECO No.	Affected Pages	File Name	Notes
2/16/01	7E6700	2665-001	All	om3429book_1_16FEB01	First Printing

Kodak and *X-Omat* are trademarks of Eastman Kodak Company.